


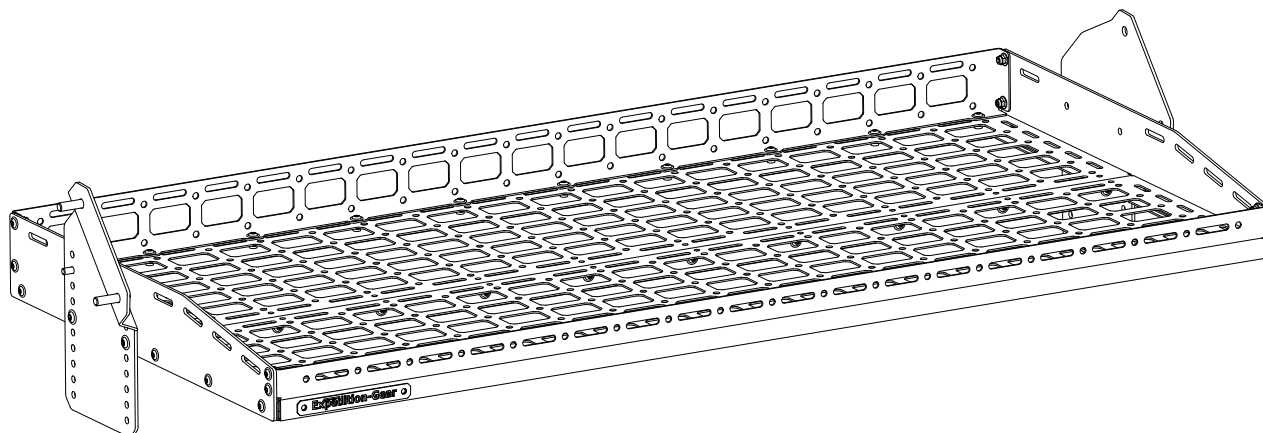


WARNING


1. Before start check if you have all components and tools.
2. Expedition-Gear will not be responsible for any damage caused by the failure to install the product.
3. Improper installation may result in bodily injury, death or car accident hence products must be checked prior to use, properly and securely assembled and attached to vehicle and periodically inspected.

1

1. Bolt together the two pices of shelf.


PARTS LIST	
PART NUMBER	PART
1	Shelf
6	Bolt - M5 x 10
7	Nut - M5

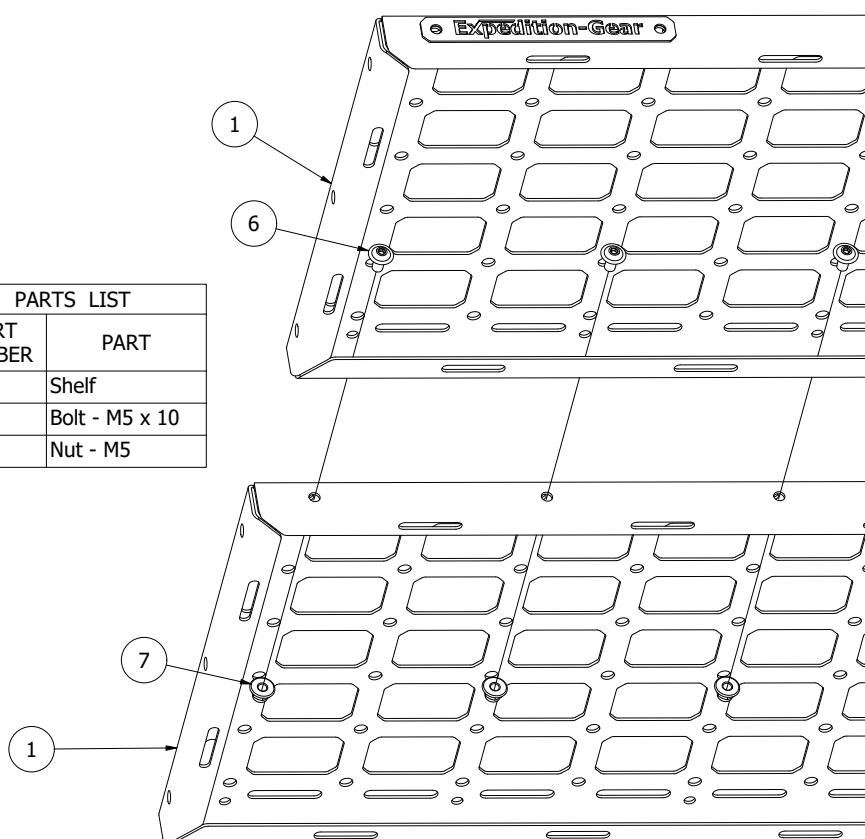

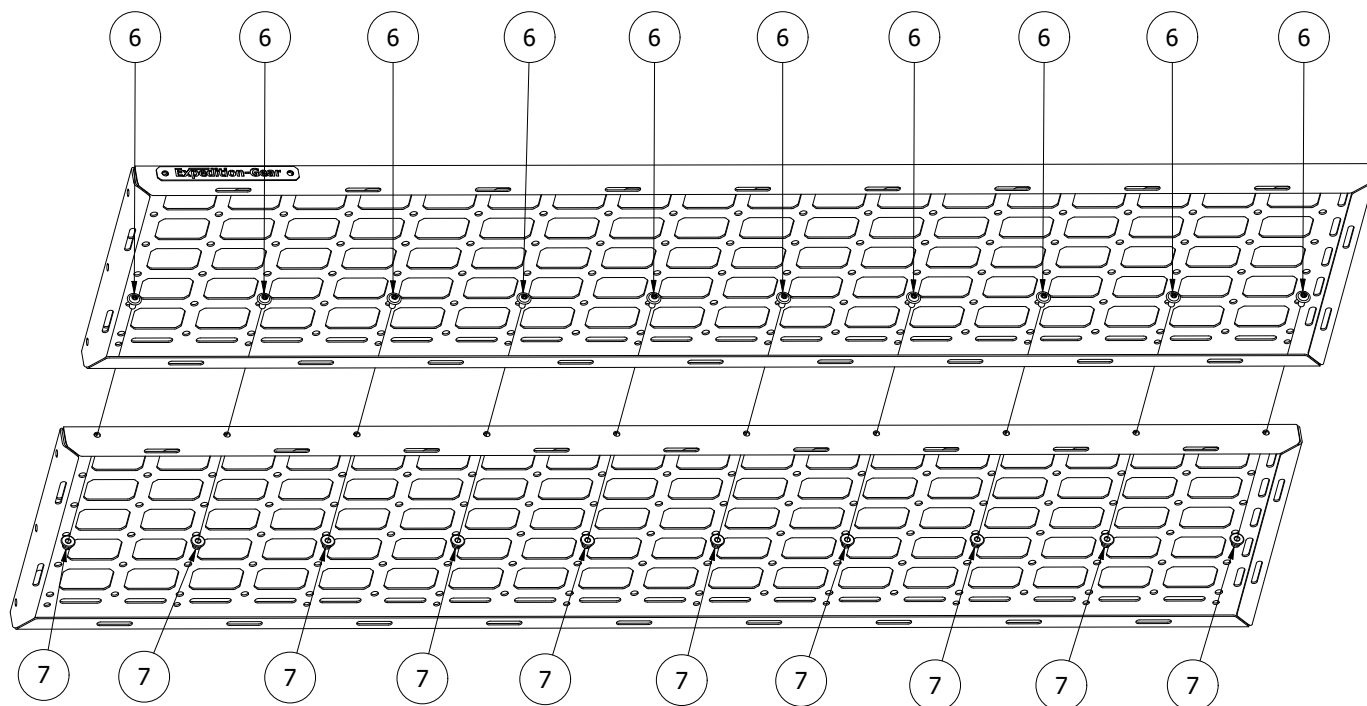

2



1. Instal the edge guards according to the scheme.

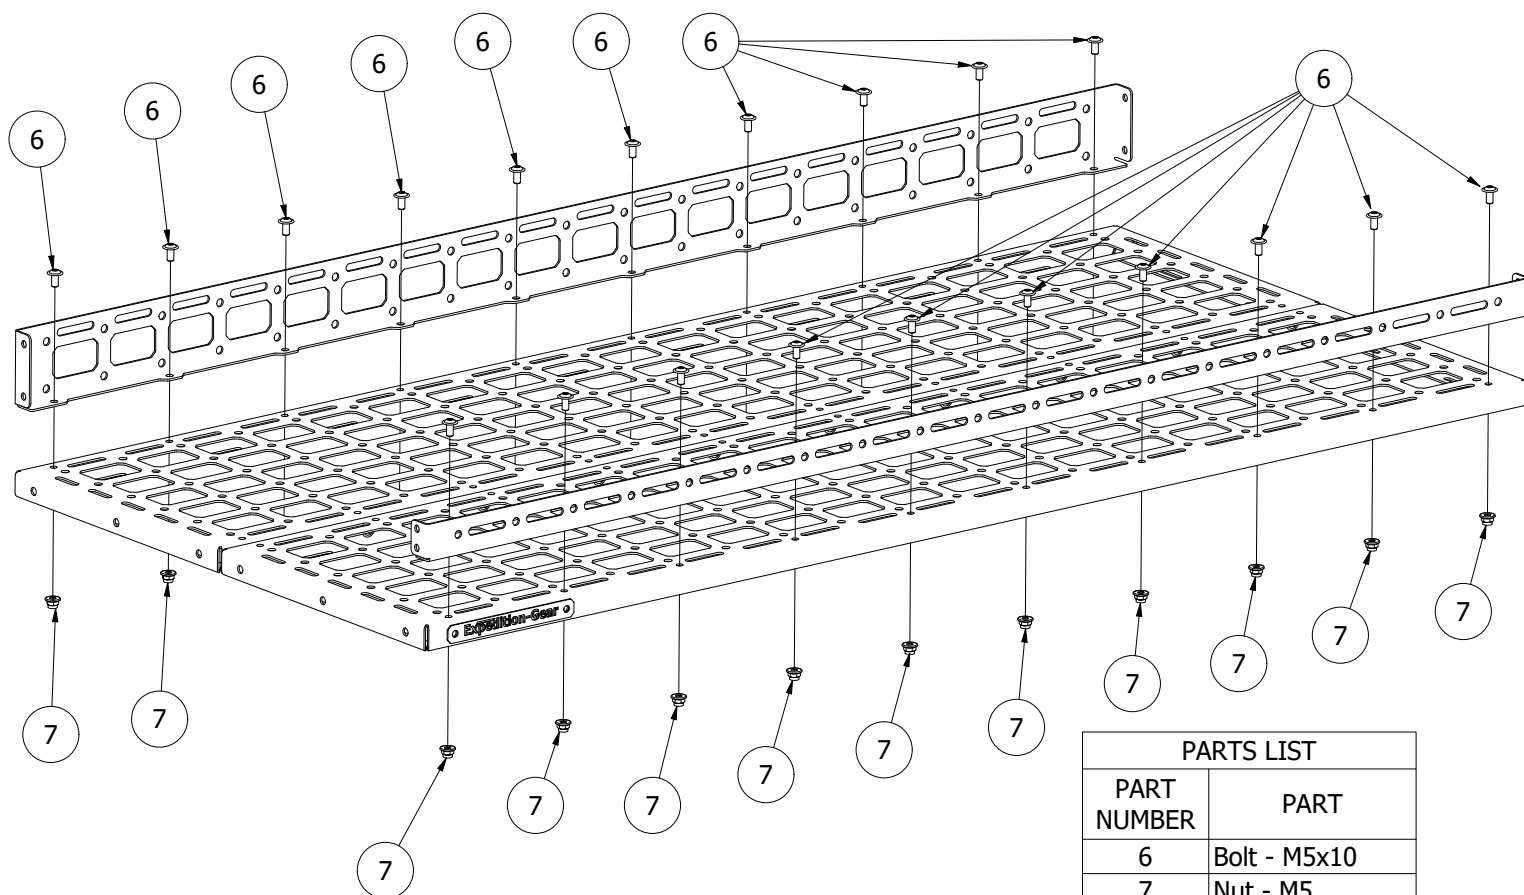

PARTS LIST


PART NUMBER	PART
6	Bolt - M5x10
7	Nut - M5

1. Przykręć ściany boczne półki jak przedstawiono na rysunkach.

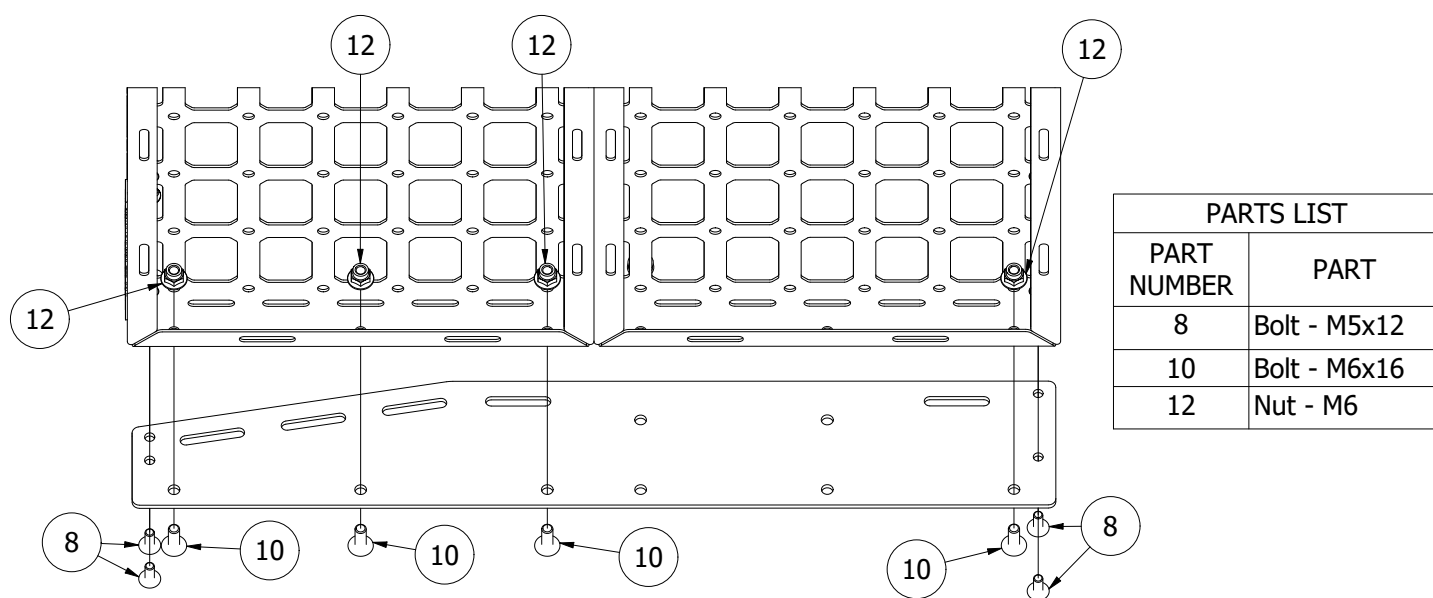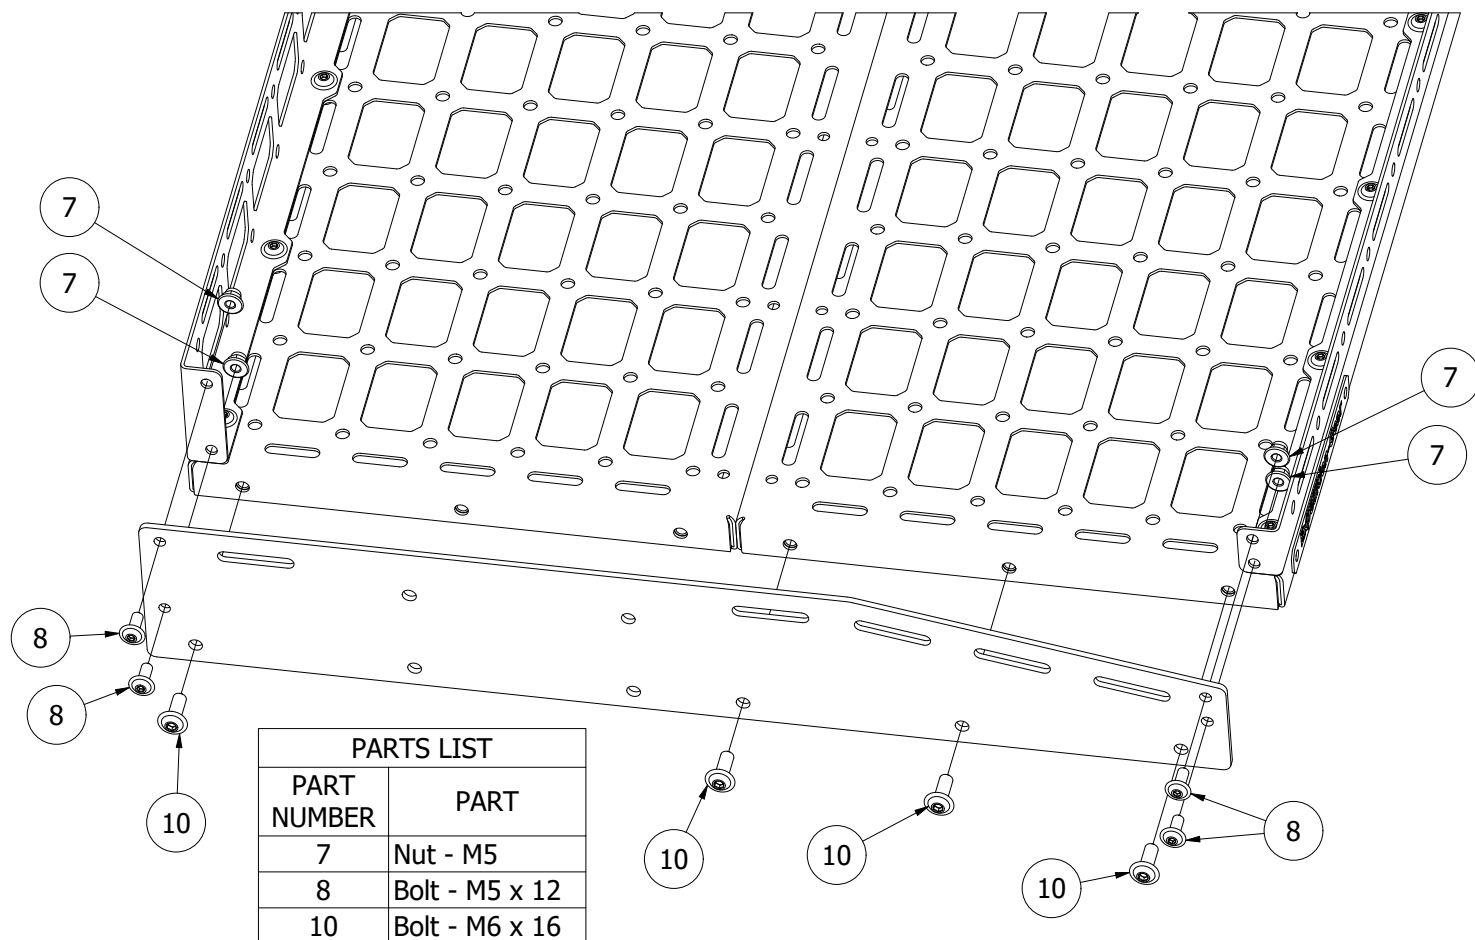

4

1. Remove the plastic covers from the car frame and screw mounts to the Jeep.

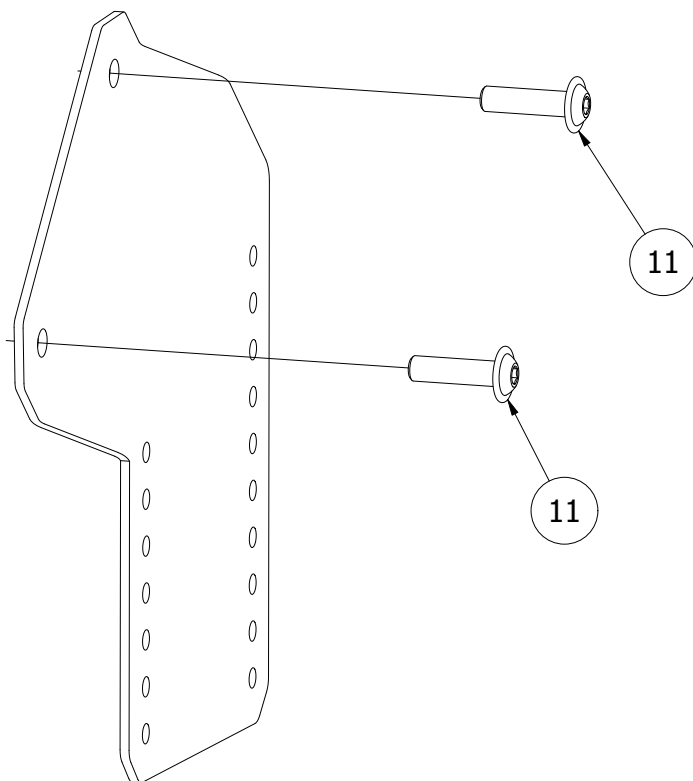


PARTS LIST	
PART NUMBER	PART
11	Bolt - M8 x 35


5

1. Install the shelf according to the scheme.

PARTS LIST	
PART NUMBER	PART
10	Bolt - M6 x 16
12	Nut - M6

In the highest 3 positions do not install this screw

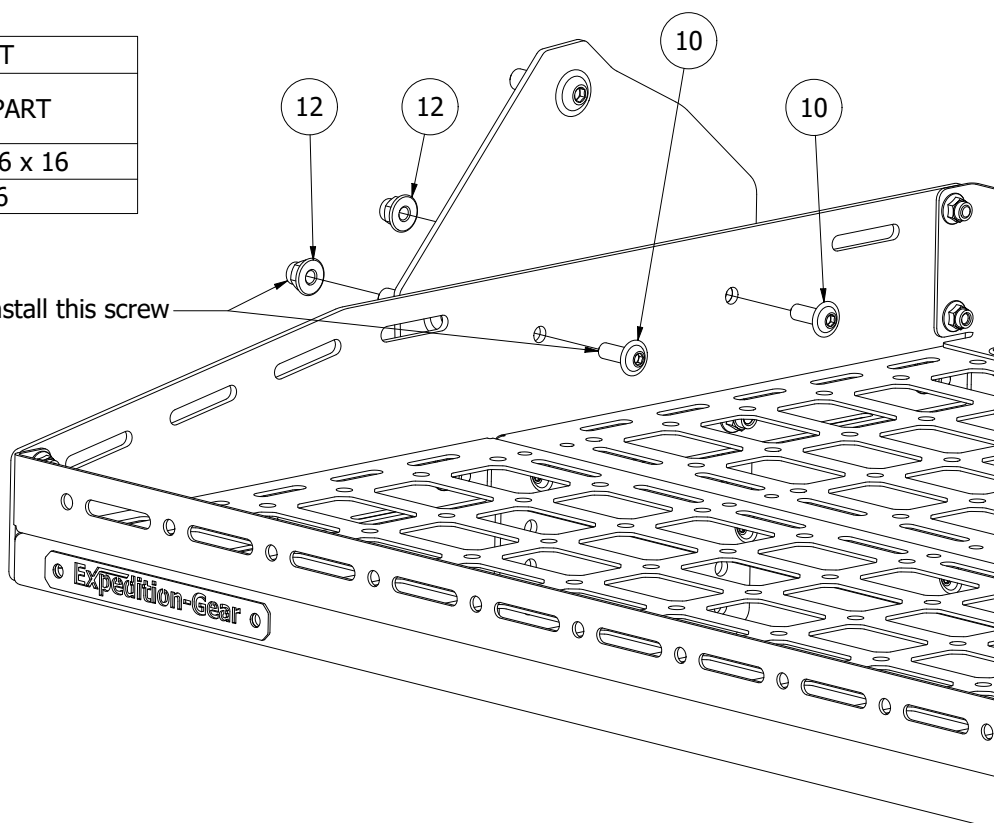

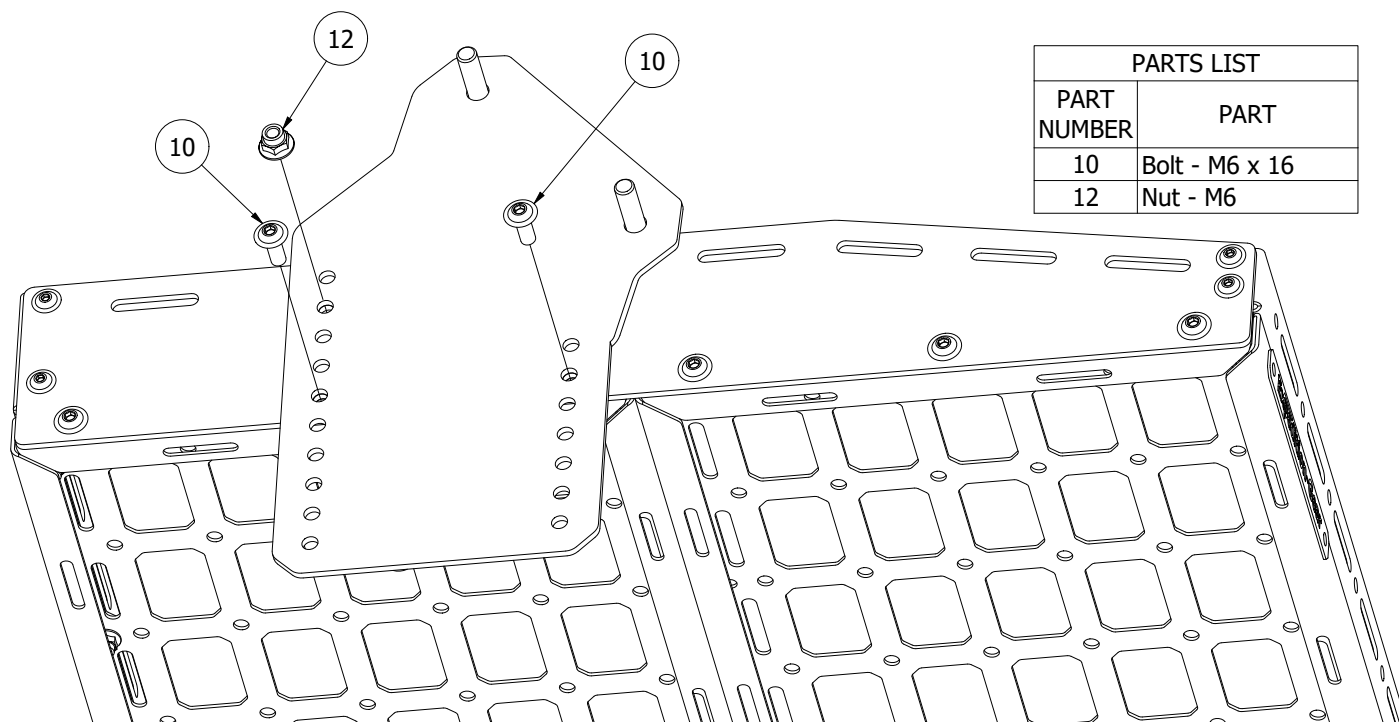

PARTS LIST	
PART NUMBER	PART
10	Bolt - M6 x 16
12	Nut - M6

MOVIE

Scan the QR code to see installation video.



Help up develop Expedition-Gear!
Scan the QR code and share your opinion on Google.

If you have any suggestions or comments, please write to us:
info@expedition-gear.com



OZNACZ NAS! #accessoriesforadventure #expeditiongear